


## INSTALLATION REPARTITEUR / ISOLATOR INSTALL



CONNECTER IMPERATIVEMENT LA   
BORNE NEGATIVE DU REPARTITEUR   
AU MOINS COMMUN DES BATTERIES   
  
IMPERATIVELY CONNECT THE MINUS   
TERMINAL OF THE BATTERY   
ISOLATOR TO THE COMMON MINUS   
OF THE BATTERIES

